
IMPORTANT NOTICE: HARDWARE PACKAGE IS ATTACHED ON THE BOTTOM OF SEAT CUSHION.

MODEL: B9536

(1)x1	(2)x1	(3)x1
5	Arm-Left	Arm-Right
(4)x1	(5)x1	
(A)X2 (A)	M6 X 12 SCREWS F	OR BOTTOM TUBE
(В)Х2 (шшш	Ⅲ M6 X 36 SCREWS F	OR TOP TUBE AND SEAT
(с)х2 фіші	M6 X 18 SCREWS F	OR BACKREST

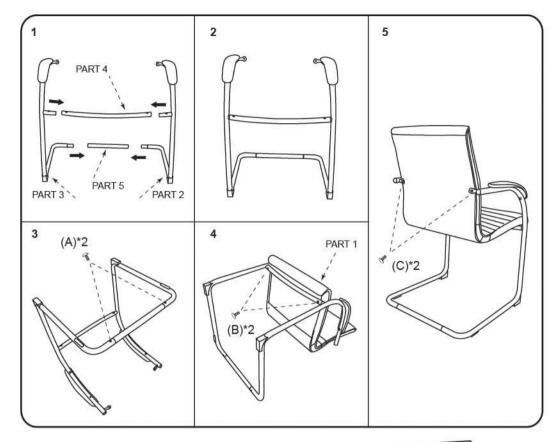

Insert and loosely tighten all screws. When assembly is completed, fully tighten all screws before using. This chair is only intended for sitting. Any other use will void the warranty.

