


Thank you for your purchase!

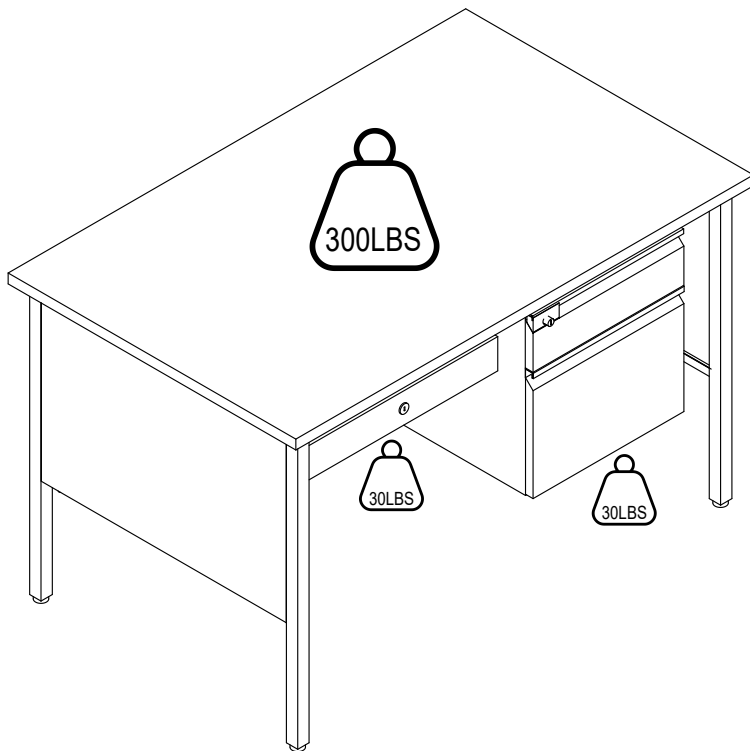

Single Pedestal Desk

ASSEMBLY INSTRUCTIONS

Before You Begin:

Please identify all component parts and hardware pieces required before you begin. Carefully remove all of the components from the packaging and set aside for assembly. Assemble on a soft surface to prevent scratching during assembly.

Caution:

Tighten all components securely before use. Failure to do so may result in personal injury.
DO NOT use any sharp objects to open plastic wrapped components as damage to product or components may result.

Warning:







CHOKING HAZARD - Small Parts. Adult Assembly Required.




DO NOT ALLOW CHILDREN TO CLIMB ON FURNITURE







Serious or fatal injuries can occur from furniture tipping over. You must install Tipping Restraint Hardware (where included) to help prevent the unit from tipping and causing accidental injury, instability, death or damage. The tipping restraint is intended only as a safety measure, it is not a substitute for proper adult supervision.

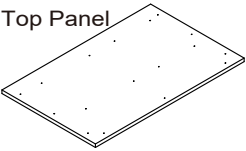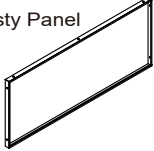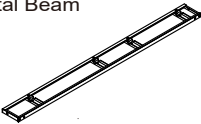To help prevent furniture from tipping over it must be permanently attached to the wall. Anti-Tip Safety Wall Straps suitable for the unit weight and wall materials (if not included) should be purchased and installed.



PARTS

(1)	Top Panel 	1
(2)	Left Side Panel 	1
(3)	Right Side Panel 	1
(4)	Modesty Panel 	1
(5)	Metal Beam 	1
(6)	Connector Bracket 	2

(8)	Right Hanging Drawer 	1
(9)	Connector Bracket 	1
(10)	Drawer 	1



A	Bolt (M6*16) 	17
B	Bolt (M6*45) 	6
C	Screw (9#*15(SP4.2)) 	4
D	Bolt (M6*12) 	4
E	Bolt (M4*10) 	6
F	Allen Wrench 	1

STEP 1

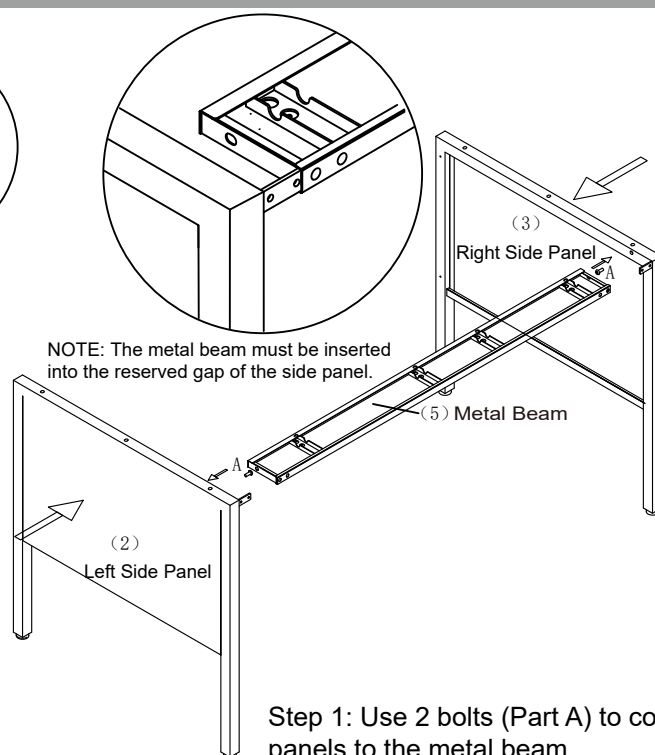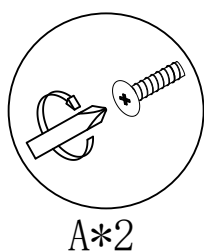


Step 1: Use 2 bolts (Part A) to connect with the left and right side panels to the metal beam.

STEP 2

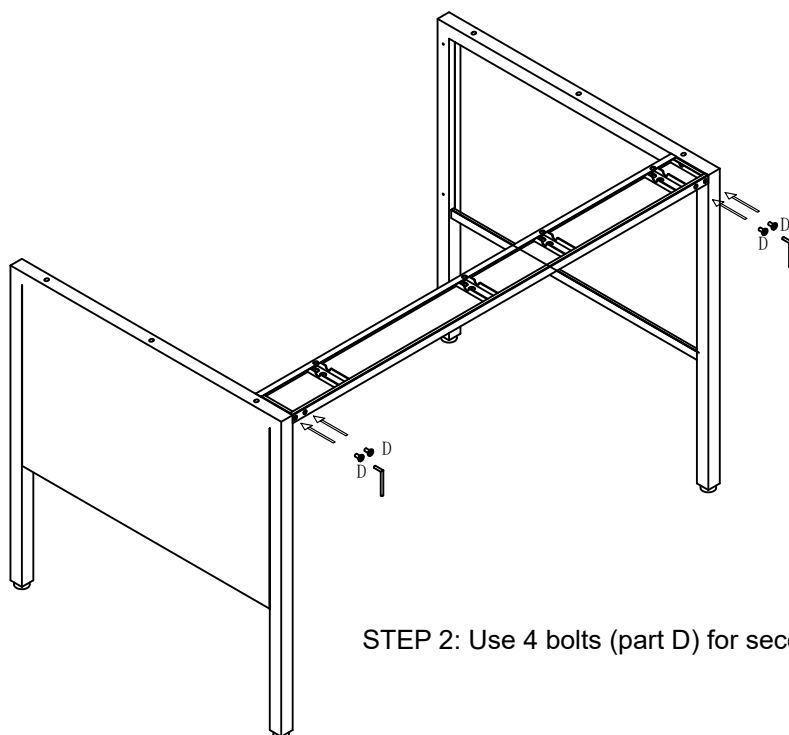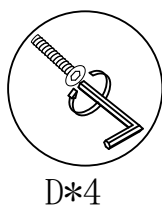


STEP 2: Use 4 bolts (part D) for secondary attachment.



STEP 3

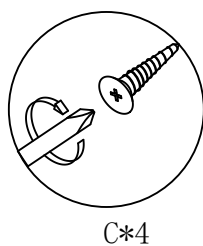

STEP 3: Use 4 screws (Part C) to connect the modesty panel to the left/right side panels.

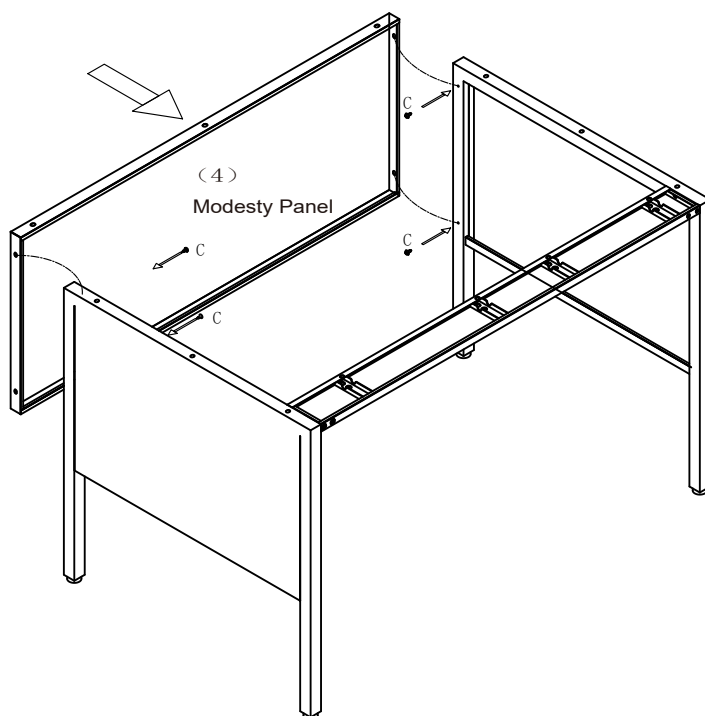


STEP 4

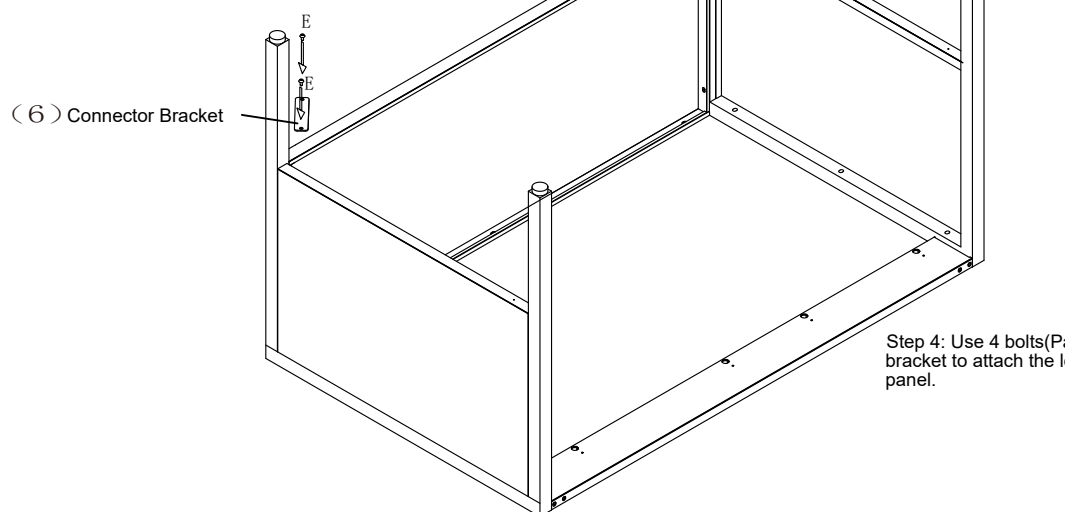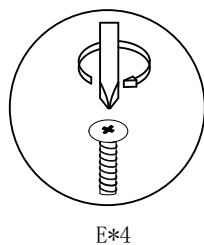

Step 4: Use 4 bolts (Part E) and connector bracket to attach the legs and the modesty panel.


STEP 5

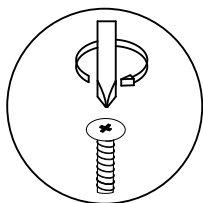


A*7
B*6

Step 5: Use 7 bolts (Part A) and 6 bolts (Part B), to connect the metal frame to the underside of the top panel (Part 1).

Note: the hole position on the metal frame should be correspond to the hole position on the top panel.

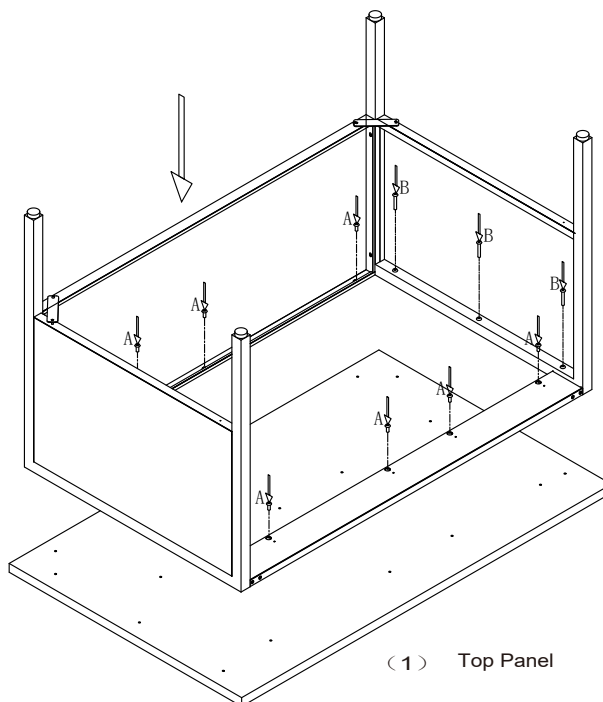


STEP 6

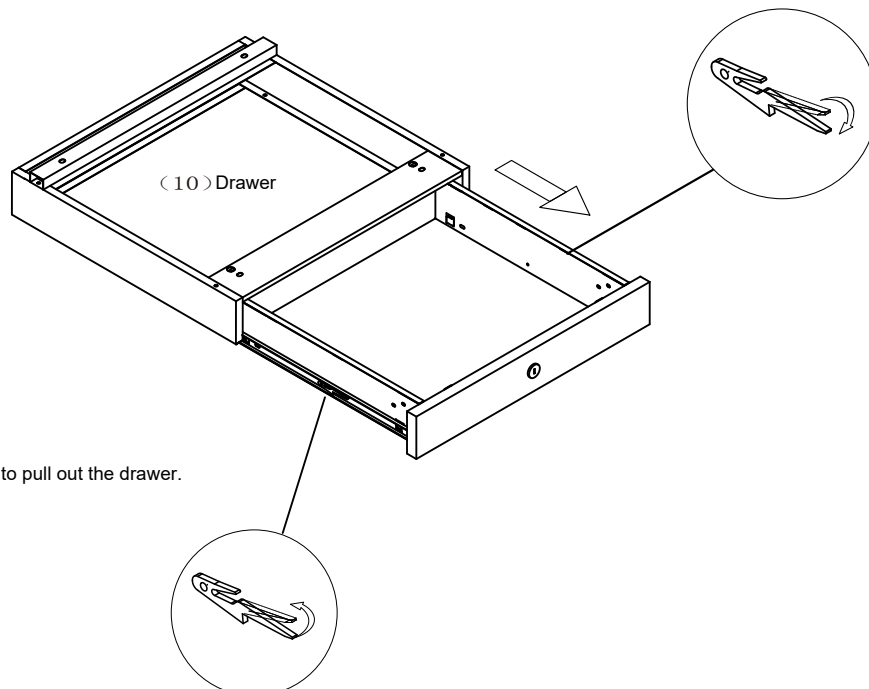

Step 6: Pull the buckle in the specified direction to pull out the drawer.



STEP 7

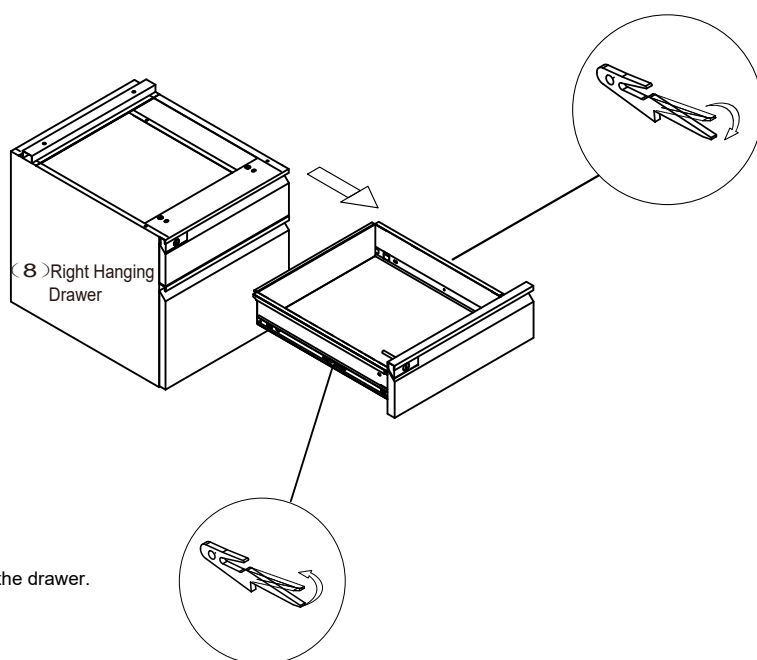


Step 7: Pull the buckle in the specified direction to pull out the drawer.

STEP 8


Step 8: Use 8 bolts (Part A) to attach the middle and hanging drawers to the top panel and the desk frame.

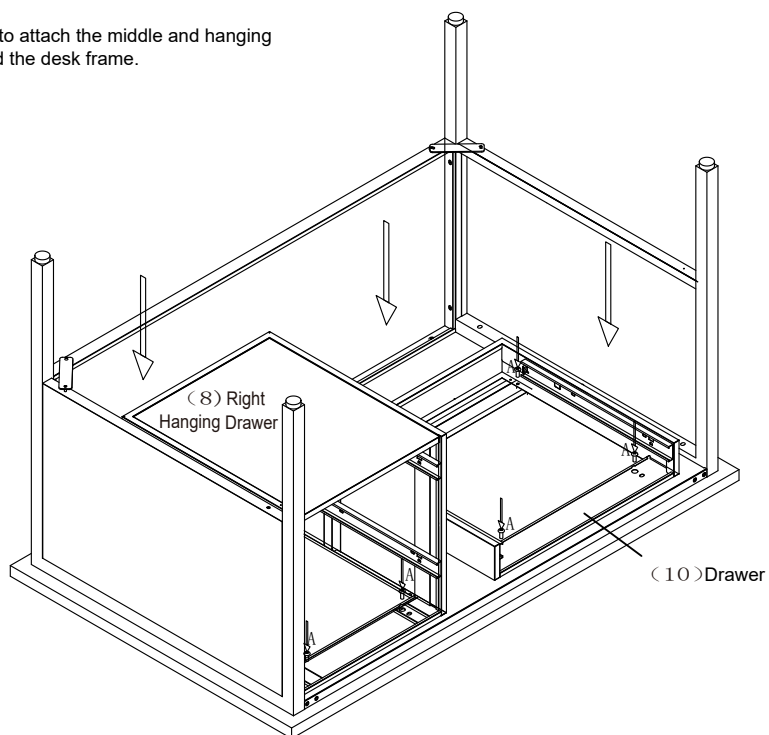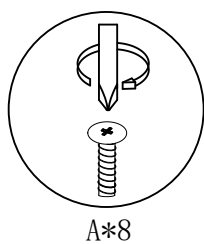

STEP 9

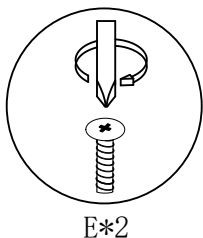

Step 9: Use 2 bolts (part E) and connector bracket (Part 9) to attach the drawer to the frame.

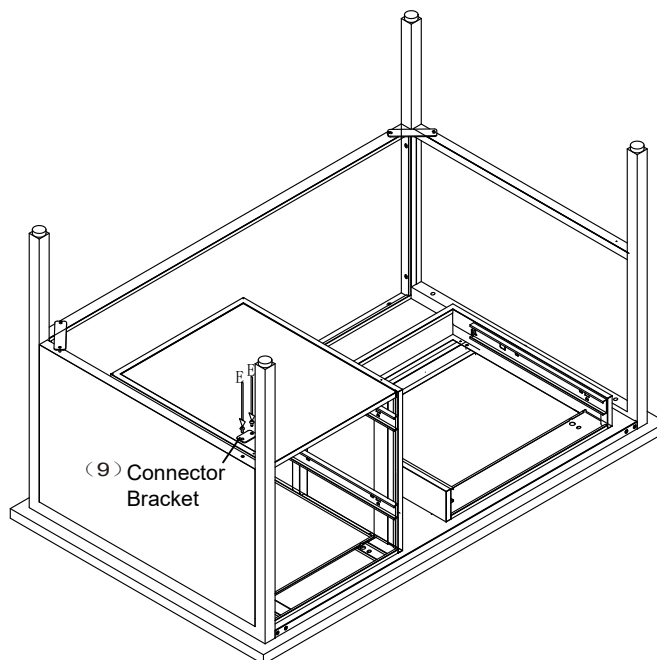

STEP 10

Step 10: Pull the lower buckle in the specified direction and insert the drawer.

